

02 / INSTALL

Pantry kit: 600/600 cabinet





PANTRY KIT: 600/600 CABINET


Using the HØLTE pantry kit and carefully amended IKEA cabinets, it is possible to create a bespoke pantry cabinet with open shelves and integrated LED lighting. Follow these simple steps to see how.




Cut pieces A1 & A2 from cabinet side 782mm

Cut pieces B1 & B2 from cabinet side 1164mm



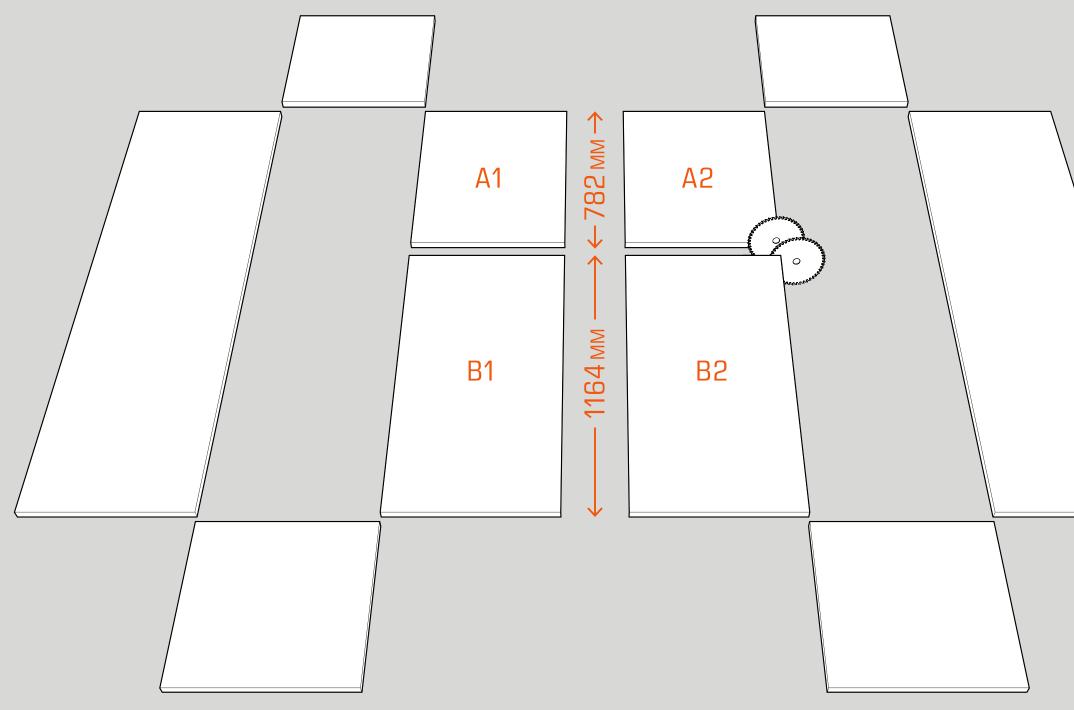






Build the two cabinets with cut down side panels as per IKEA instructions

To do this the back boards will also need to be cut to size



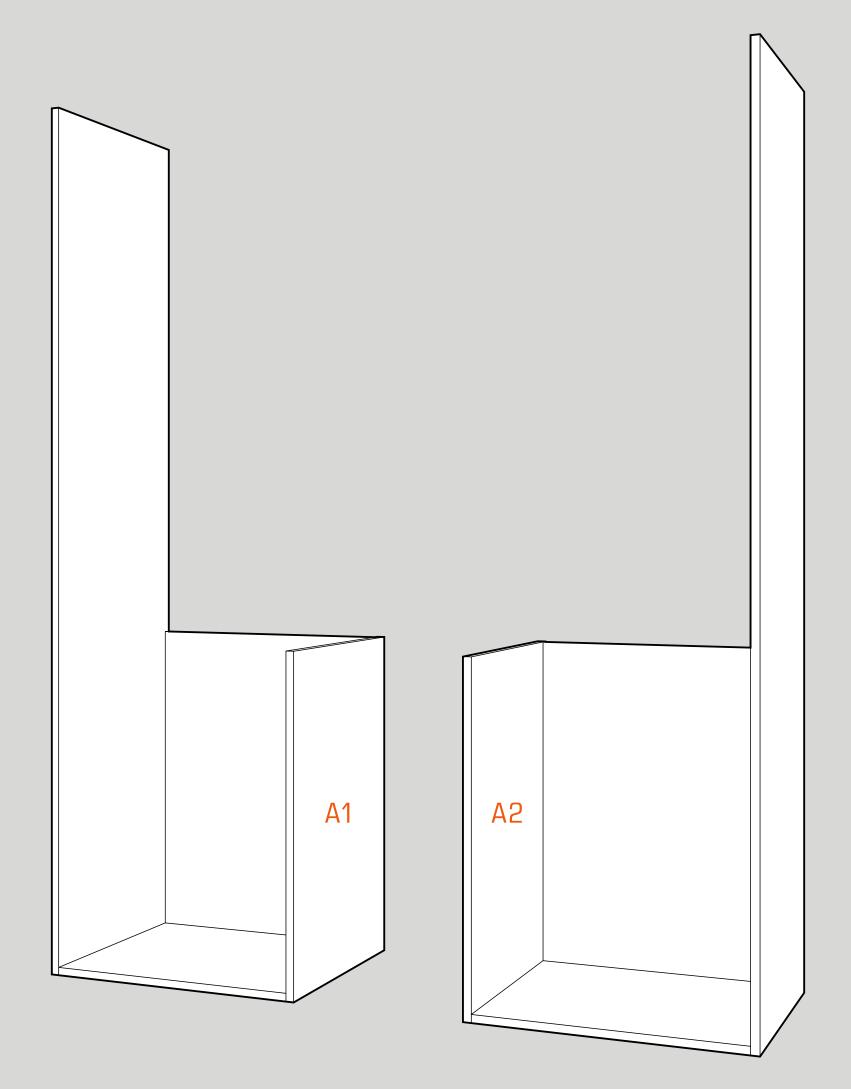




Clamp and screw the two cabinets together

Use panels B1& B2 to create the cabinet top and dividing panel




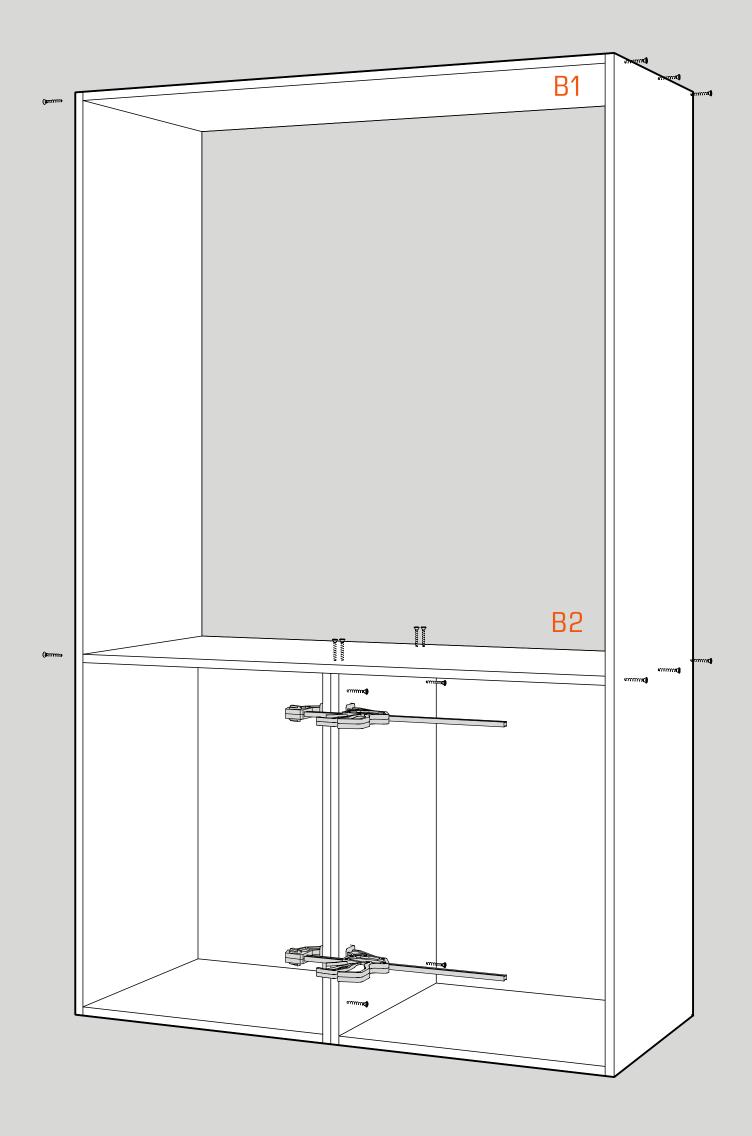



Fix 2'x 2' (50 x 50mm) timber battens flush with back edge of cabinets




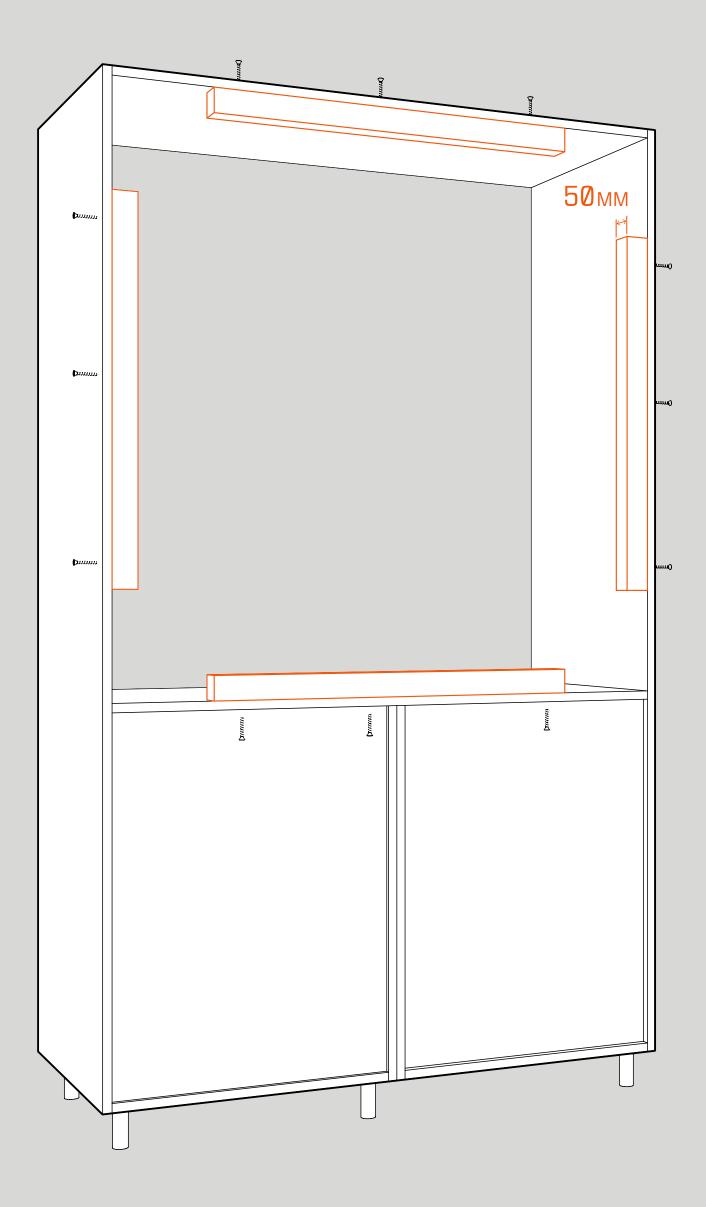



Place cabinet in place, level and fix




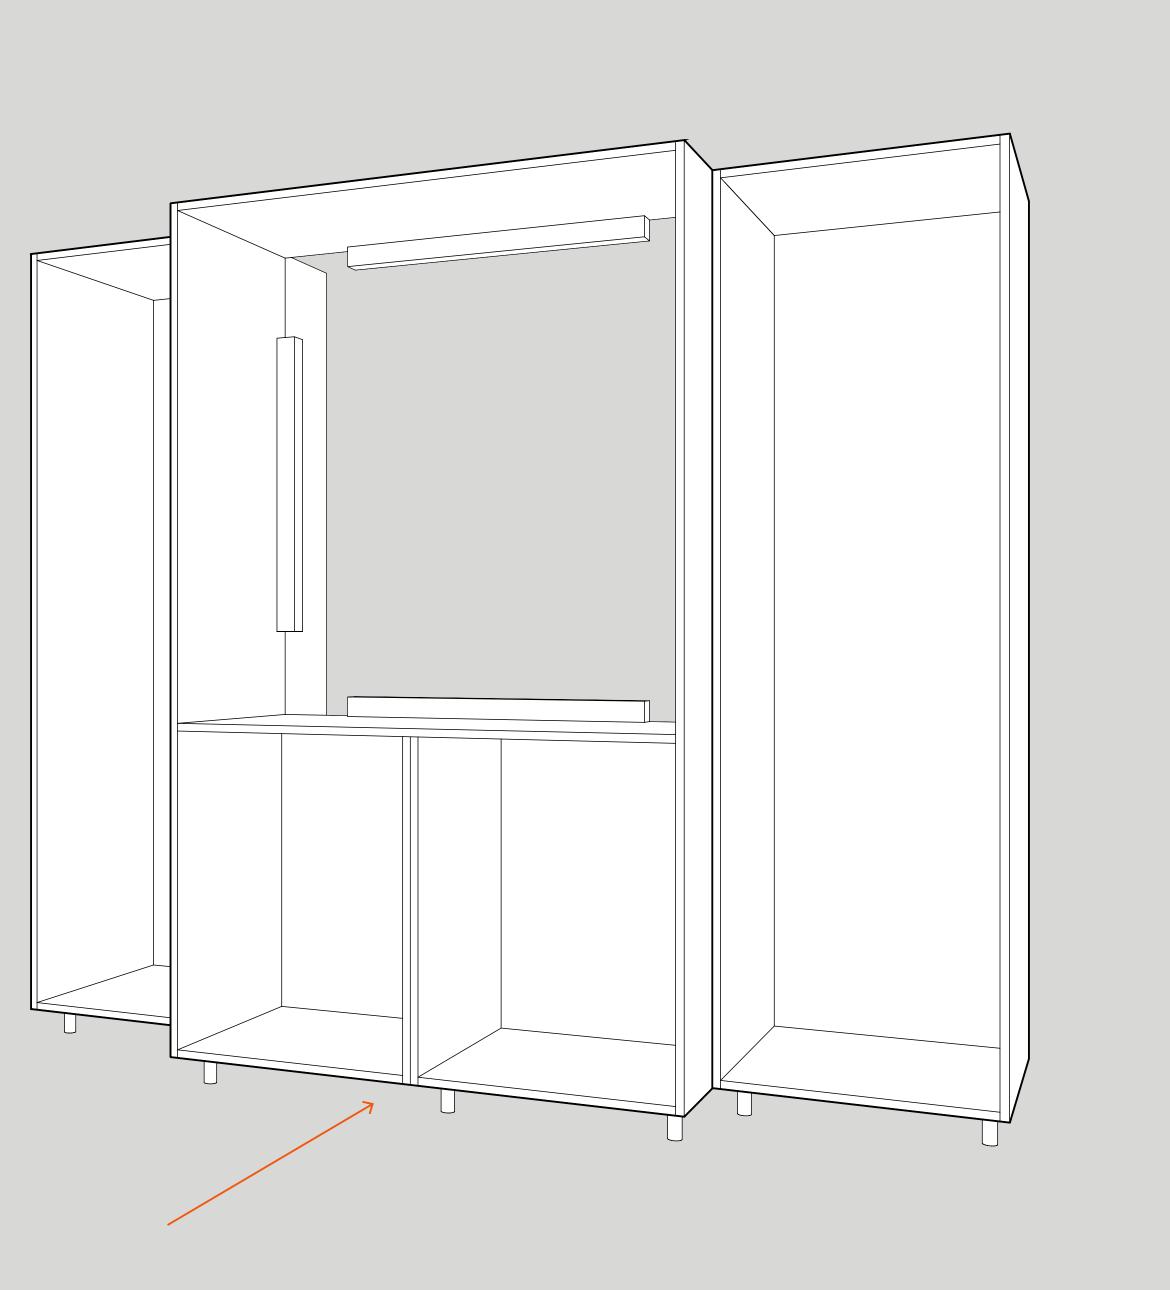



Apply grab adhesive to the front face of the timber battens




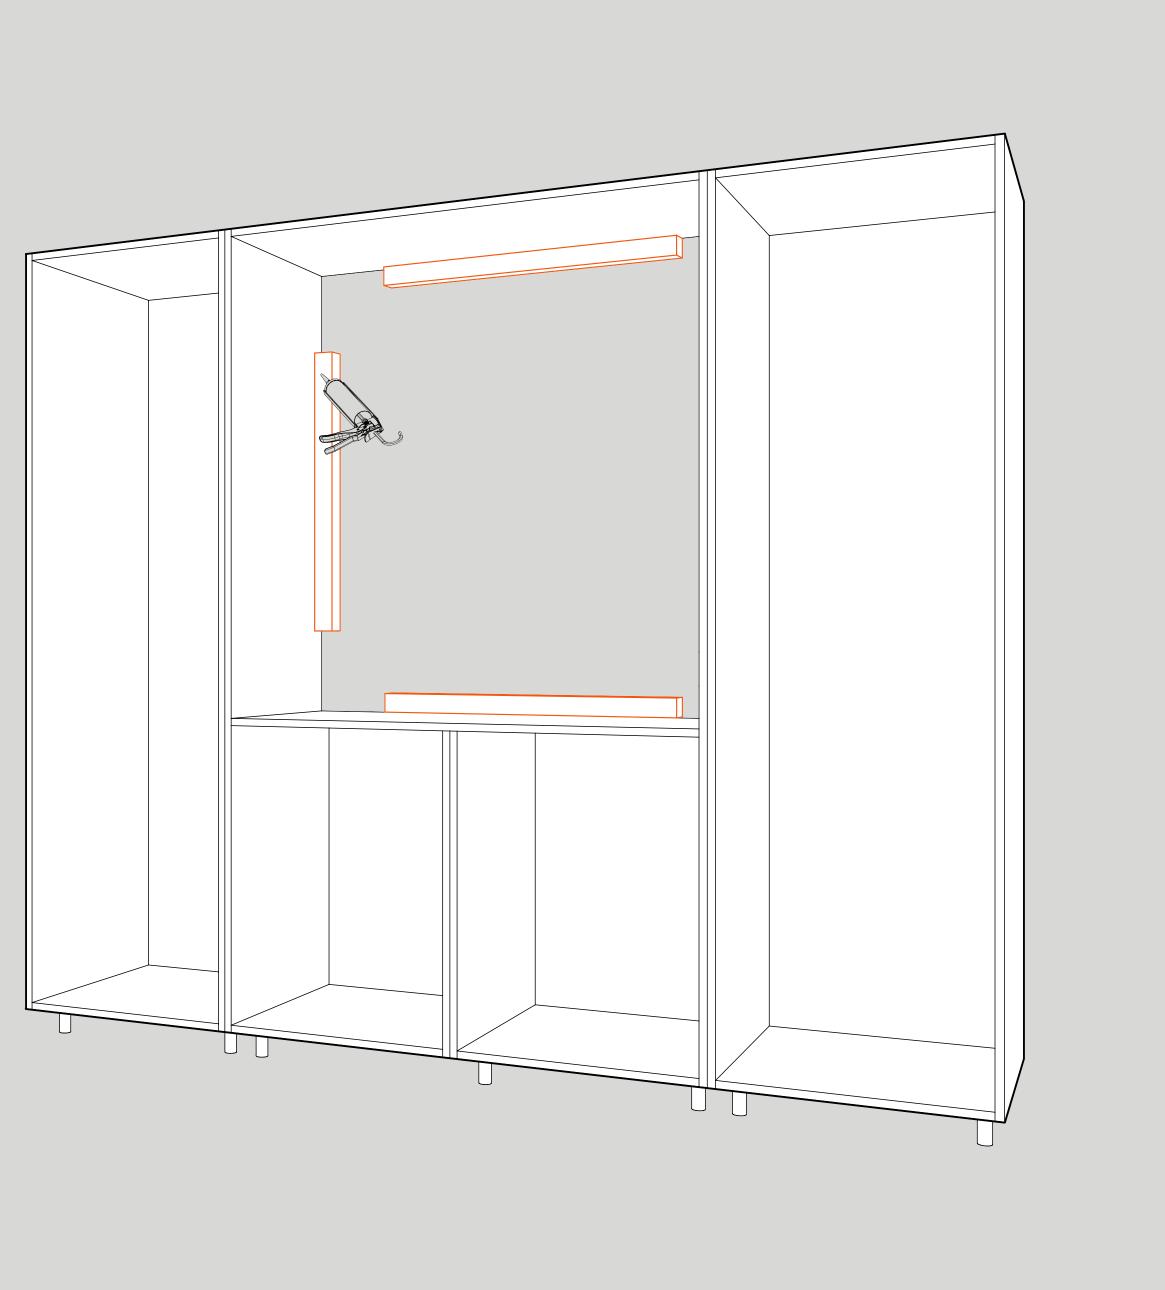



Push HØLTE back board into place & pull through electric feed



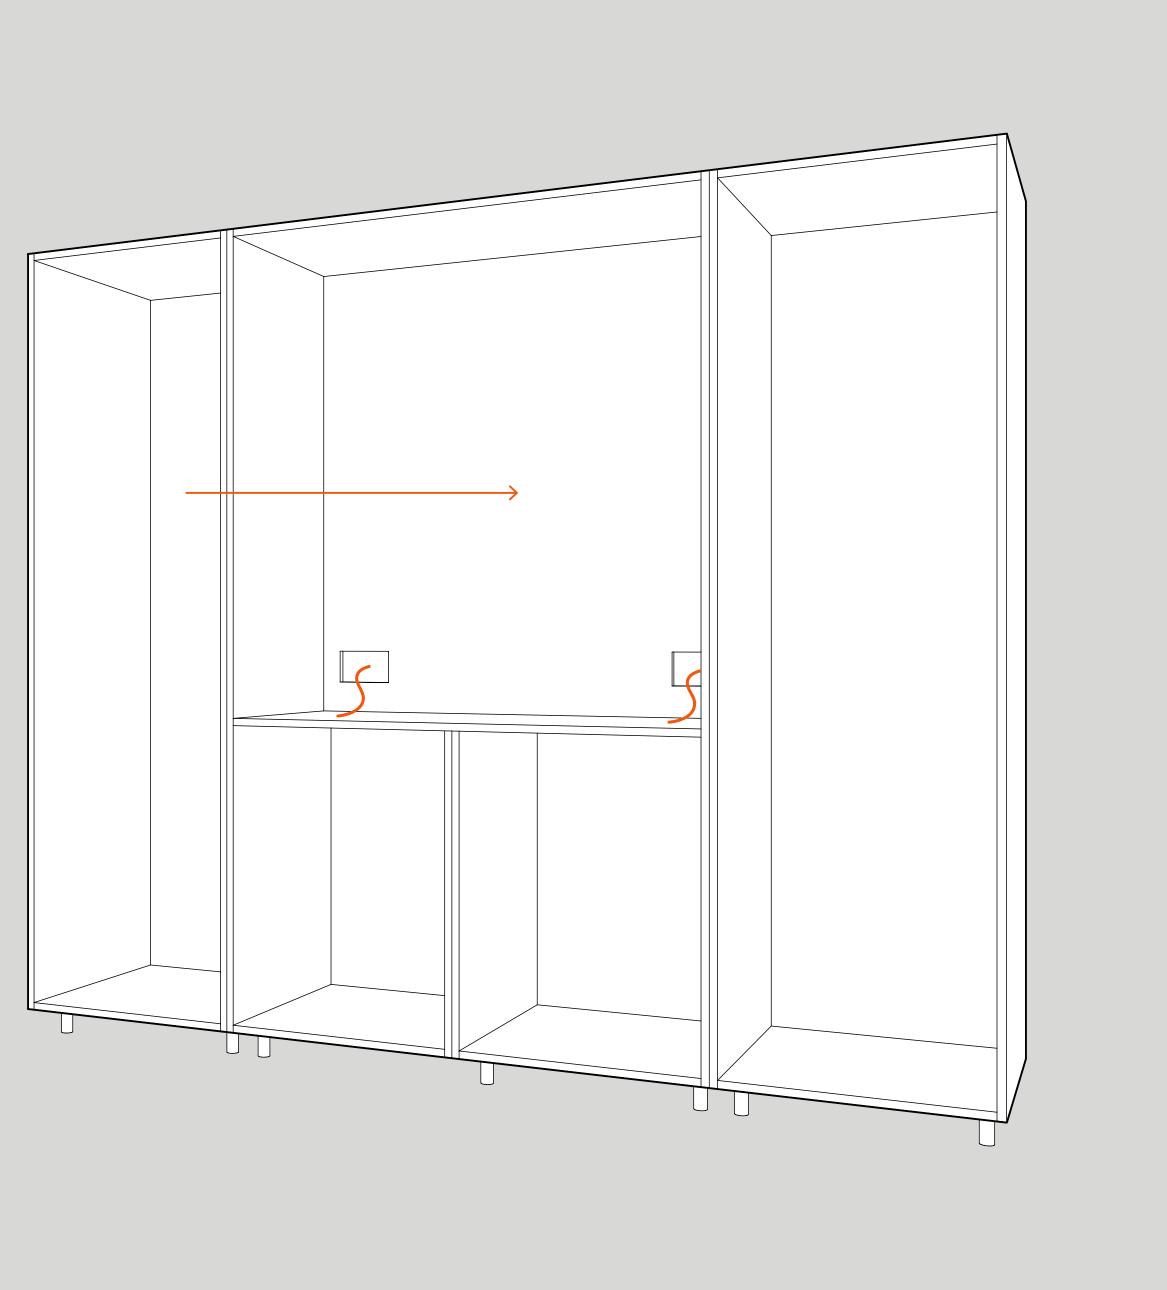




Drill holes in top of cabinet to allow cable feed for lighting sensor and LED tape supply

Fix HØLTE lighting panel in place set back 80mm from front edge




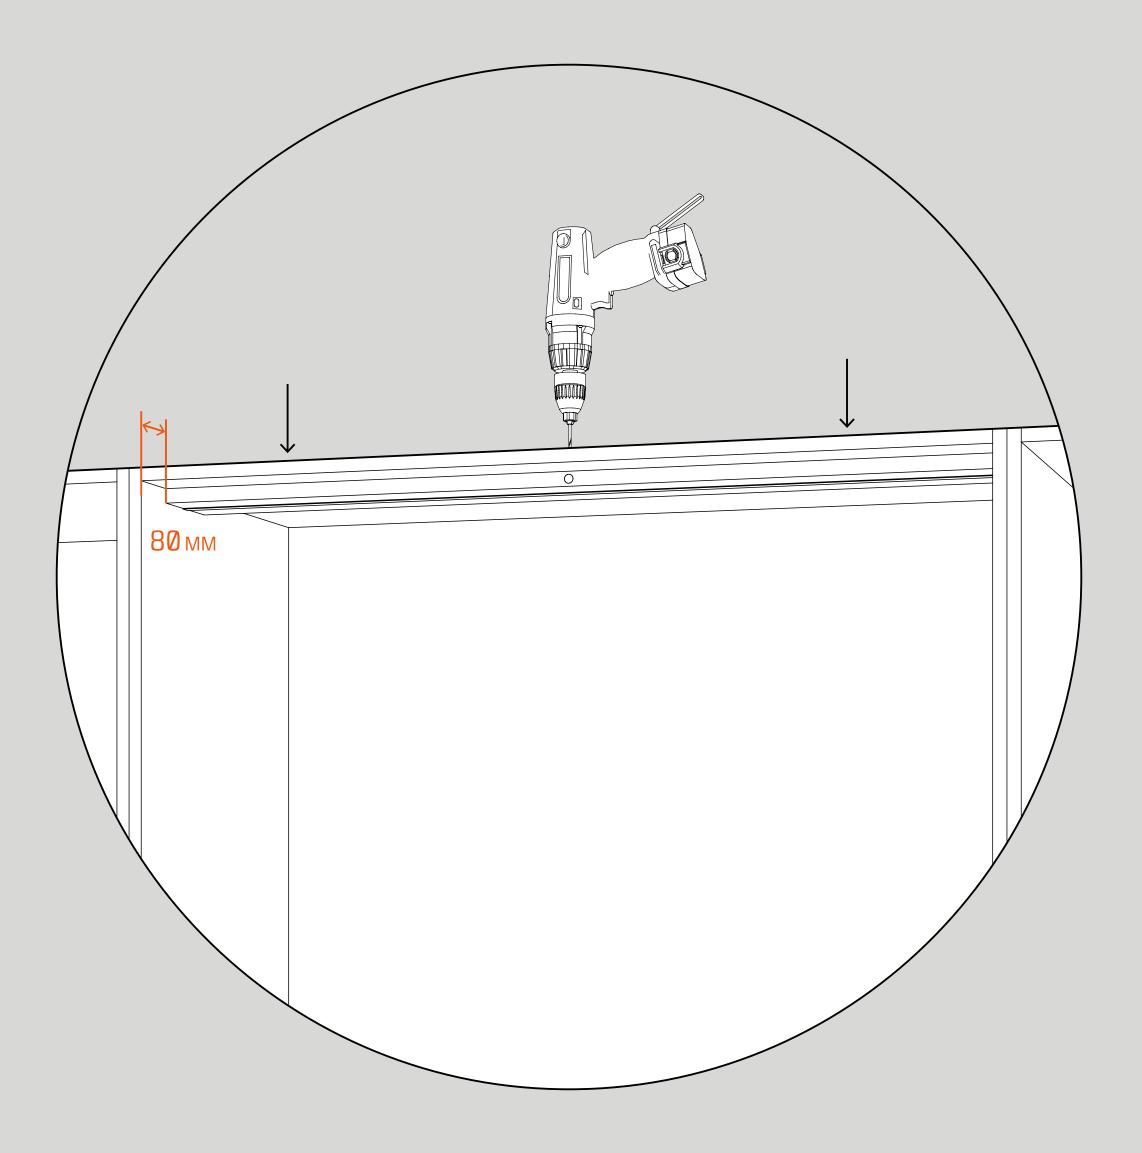




Install shelves and socket plates



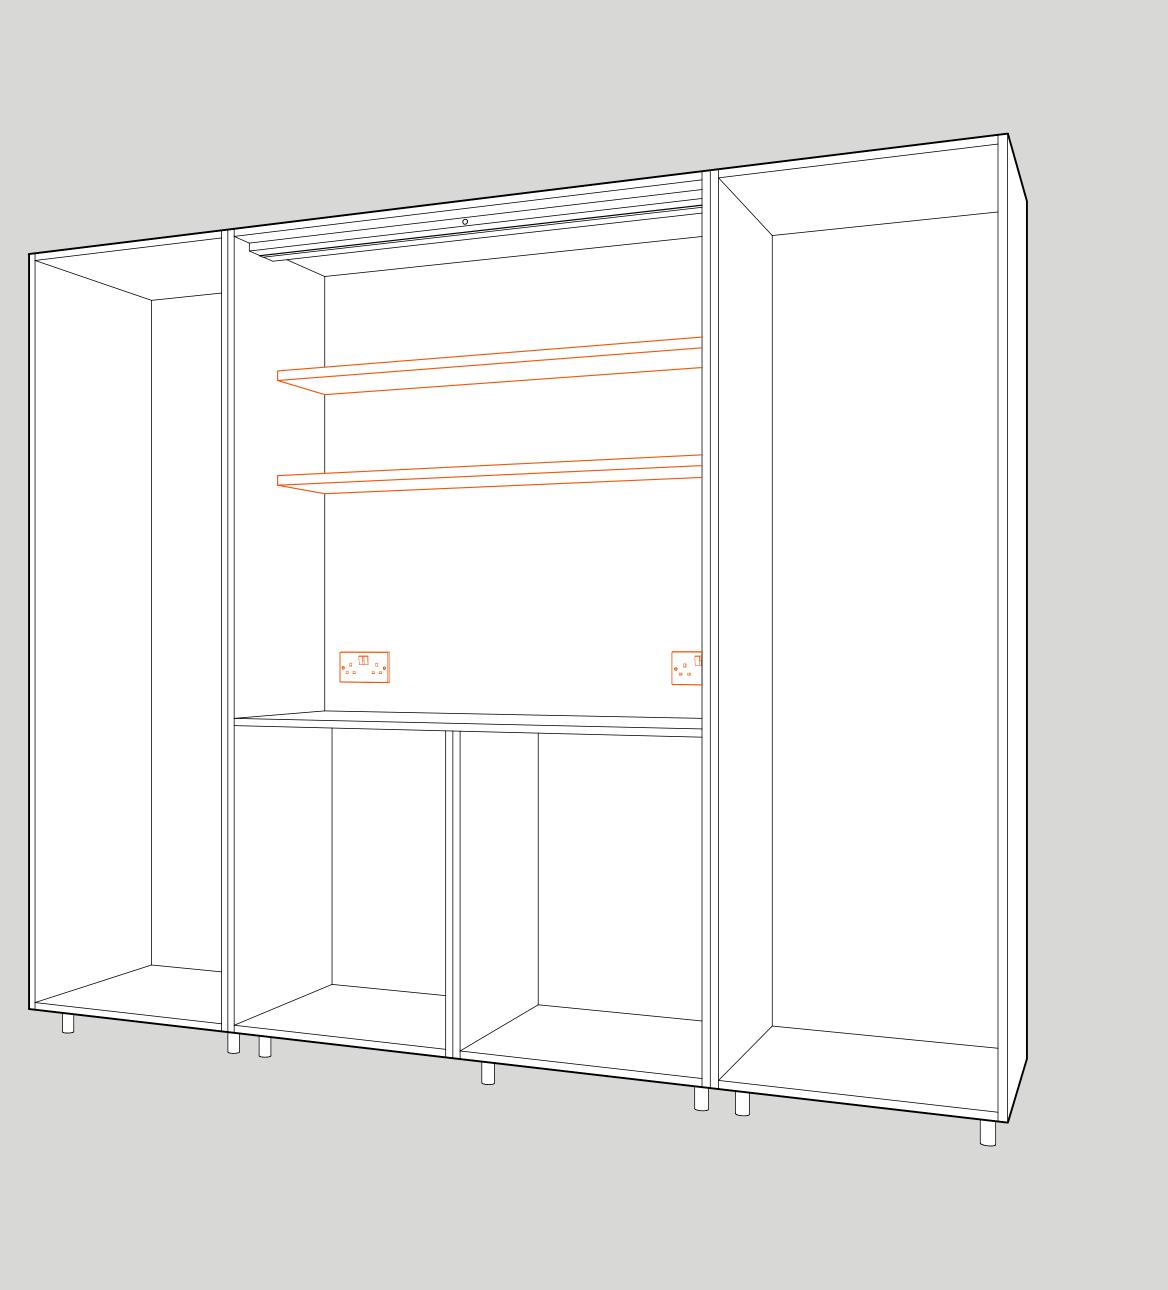

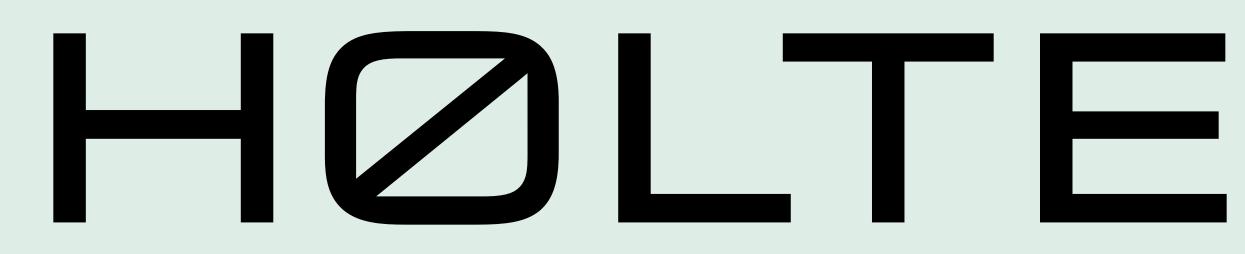

STUDIO 07960 976 895 0207 041 6015

hello@holte.studio

Unit G05 Northside Studios 16-29 Andrews Road London E8 4QF

Monday to Friday 9am-6pm Saturday 10am-5pm

